



Ford Sport Track

2001


 




KEY-OVERRIDE-ALL

Made in Canada Rev. A - 02 / 07 / 2008
Web site: <http://www.ifar.ca>

ENCRYPTED TRANSPONDER BYPASS MODULE (Self Learning)


LED Module Diagnostics :
On: Activated.
OFF: Not activated.
Flash: Not programmed.

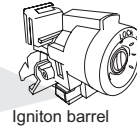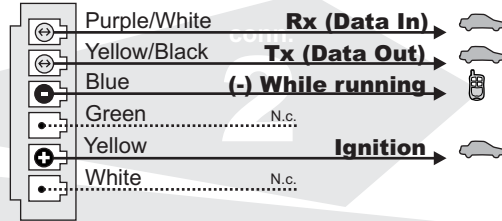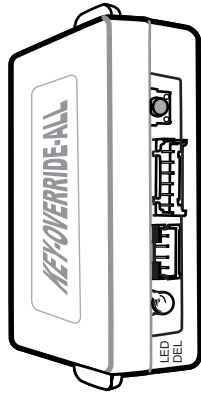


PIN #	DESCRIPTION
1	GROUND (N.C.)
2	IGNITION +12V (N.C.)
3	RX (Data)
4	TX (Data)

SEE www.ifar.ca
(KEY-OVERRIDE-SL2
INSTALLATION
SUPPLEMENT) FOR
VEHICLE WIRE
COLORS

Connector 1 (Black - 4 pins):
Determine the type of installation:

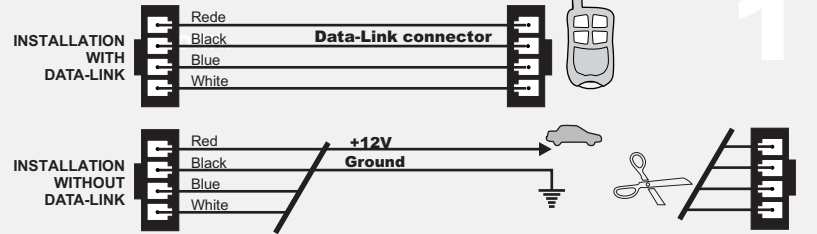

Cut off one plug of the Data-Link connector, connect the red wire to +12V and the black wire to ground.

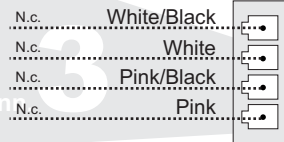

Connector 4 (White - 4 pins):
Connect with the **FLASH LINK UPDATER** for
web update.



Back view of the module

📶 Connect wire to Remote-Starter/Alarm 🚗 Connect wire to vehicle

○ OUTPUT ● INPUT

1 **Make the connections to the vehicle:**

1.A **Connector 1 (Black):**
Determine the type of installation:
- **INSTALLATION WITH DATA-LINK**
- **INSTALLATION WITHOUT DATA-LINK**

1.B **Connector 2 (White):** Make the connections

PROGRAMMATION Vehicle equipped with SMART KEY



Remove all keys from key
remote cards.



Keep the card away from the vehicle
(10 feet/3 meters minimum) to proceed
with the programming procedure.

2 Keep programming button pressed
while inserting **connector 1**.

3 **Insert connector 2.**
Release the programming button when the LED turns ON.
If the LED is flashing at this point the module is already Programmed
and can't be programmed again. (To prevent malicious use this module
can be programmed in only one vehicle.)

4 **KEY#1**
Insert the first functional key into
the ignition barrel and turn the ignition ON.

5 **KEY#1**
When the security light turns OFF, turn the key to
the OFF position and remove the first key from the barrel.


**You have 5 seconds to complete the
following procedure**

6 **KEY#2**
Insert the second functional key into the
ignition barrel and turn the ignition ON.


7 **KEY#2**
When the **dash board security light turns OFF**,
turn the key to the **OFF position** and remove the
second key from the barrel.

8.a **You have 10 seconds to complete one
of the following procedures**

For MANUAL Transmission:

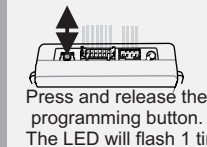

 Press and release the
programming button.
The LED will flash 1 time.



8.b Ignition
With a jumper wire, apply power
(12v) to the vehicles ignition wire
until the **dash board security
light turns OFF**.
Remove the jumper.

For AUTOMATIC Transmission:



8.b Activate the remote starter.

9 **If the LED flashes 10 times, the module is
programmed.**
If the LED turns ON, repeat from step 1.



Technical support:
TEL: 514-255-HELP (4357)
FAX: 514-255-1367
Web: www.ifar.ca

Neither the manufacturer or distributor of this module is
responsible of damages of any kind indirectly or directly
caused by this module, except for the replacement of this
module in case of manufacturing defects. This module must
be install by qualified technician. This instruction guide may
change without notice. Visit www.ifar.ca to get latest version.



Ford Sport Track

2001


 




KEY-OVERRIDE-ALL

Fabriqu  au Canada Rev. A - 02 / 07 / 2008
Site internet <http://www.ifar.ca>

MODULE DE CONTOURNEMENT DE TRANSPONDER ENCRYPT  (Auto-apprentissage)

Diagnostic du DEL du module
Allum : Le module est activ .
 teint: Le module n'est pas activ .
Flash: Le module n'est pas programm .

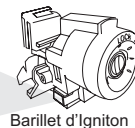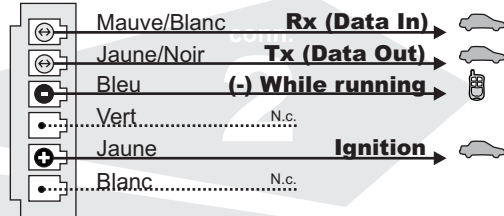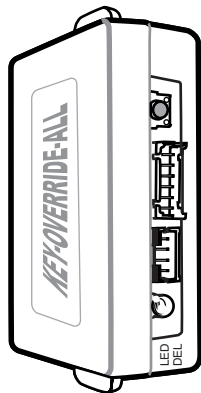


Barillet d'ignition


PIN #	DESCRIPTION
1	MASSE (N.C.)
2	IGNITION +12V (N.C.)
3	RX (Data)
4	TX (Data)

VOIR www.ifar.ca
(KEY-OVERRIDE-SL2 SUPPL MENT D'INSTALLATION) POUR LES COULEURS DE FILS DES CONNECTEURS.


Connecteur 1 (Noir - 4 pins):
D terminez le type d'installation:

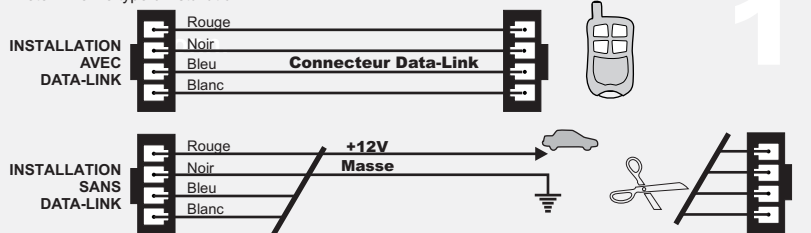

 Coupez les 4 fils   l'extr mit  de l'un des deux connecteurs Data-Link. Connectez le fil rouge au 12V et le fil noir   la masse du v hicule.



Connecteur 4 (Blanc - 4 pins):
Connectez avec le **FLASH LINK UPDATER** pour les mises   jour par internet.

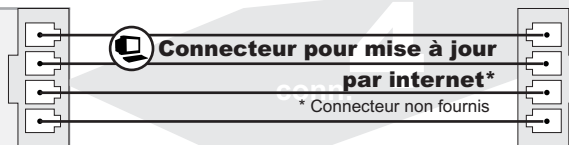

Vue de dos du module

Branchement du filage au d marreur   distance/Alarme Branchement du filage au v hicule SORTIE ENTR E

1 **Effectuez les connexions au v hicule:**
Connecteur 1 (Noir):
D terminez le type d'installation:
- **INSTALLATION DATA-LINK**
- **INSTALLATION NON DATA-LINK**

1.A **Connecteur 2 (Blanc):**
Effectuez les branchements.

PROGRAMMATION

V hicule  quip  d'une cl  INTELLIGENTE



2 Maintenez le bouton de programmation enfonc . Ins rez le **connecteur 1** dans le module.

3 Ins rez le **connecteur 2** dans le module. Lorsque le DEL s'allume, rel chez le bouton de programmation. Si la DEL clignote alors le module a d j   t  programm  sur un v hicule et ne peut  tre programm    nouveau. (Dans le but de pr venir toute utilisation malicieuse, ce module peut  tre programm  dans seulement (1) un v hicule.)

4 Ins rez la cl  fonctionnelle #1 dans le barillet et tournez la cl    la position IGNITION.

5 Lorsque la lumi re s curit  du tableau de bord s' teint, tournez la cl    la position ARR T (OFF) et retirez la cl  du barillet.


Vous avez 5 secondes pour compl ter la proc dure suivante:

6 Ins rez la cl  fonctionnelle #2 dans le barillet et tournez la cl    la position IGNITION.

7 Lorsque la lumi re s curit  du tableau de bord s' teint, tournez la cl    la position ARR T (OFF) et retirez la cl  du barillet.

8.a **Vous avez 10 secondes pour compl ter l'une des deux proc dures suivantes:**

Pour Transmission MANUELLE:

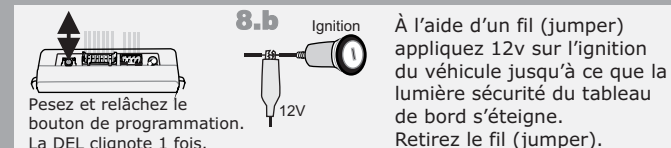

Pour Transmission AUTOMATIQUE



9 **Le DEL clignote 10 fois le MODULE est programm .**
Si la DEL reste allum e vous devez recommencer la programmation   l' tape 1. Le MODULE n'est pas programm .



Support Technique:
TEL: 514-255-HELP (4357)
FAX: 514-255-1367
Site internet: www.ifar.ca

Ni le manufacturier, ni le distributeur ne se consid rent responsables des dommages caus s ou ayant pu  tre caus s, indirectement ou directement, par ce module, except  le remplacement de ce module en cas de d fectuosit  de fabrication. Ce module doit  tre install  par un technicien qualifi . Ce guide d'instruction peut faire l'objet de changement sans pr avis. Consultez le www.ifar.ca pour voir la plus r cente version.