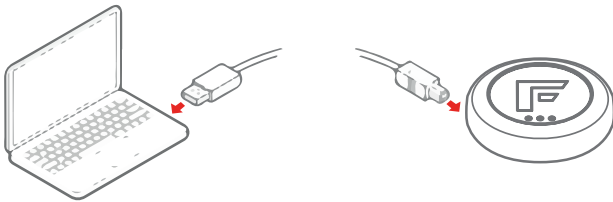**Parts required (not included):**

1x **FLASH-LINK UPDATER**
1x Microsoft Windows Computer with Internet connection

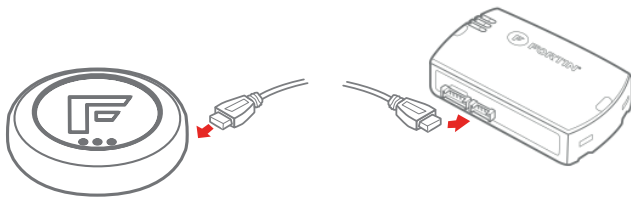|		
1		Plug in the **FLASH-LINK UPDATER** into the computer's USB port with the provided USB cable.
2	FlashLink Managerv4	Run Flash Link Manager Software.
3		Plug in the **EVO-ALL** into the **FLASH-LINK UPDATER** with provided DATALINK cable.

A. Click on BYPASS tab.
B. Activate Supported RF Kits to ON
C. Activate Option H3 – CRIMESTOPPER, OMEGA OL–RF
D. Click SAVE OPTIONS
E. Wait for the Options Saved message to appear in the top right corner.

5   Disconnect the EVO-ALL.

FUSE
FUSIBLE

Red **12V Battery** (+)

12V
Battery (+)

Black **Ground | Masse** (-)

Ground
Masse

RFA2A

BLACK FEMALE
CONNECTOR
CONNECTEUR
FEMELLE NOIR

NOT CONNECTED

NON BRANCHÉ

OMEGALINK
ANTENNA
ANTENNE

BLACK 4-PIN
CONNECTOR
CONNECTEUR
4-PIN NOIR

BLUE FEMALE
CONNECTOR
CONNECTEUR
FEMELLE BLEU

OMEGALINK
ANTENNA CABLE
CÂBLE ENTENNE
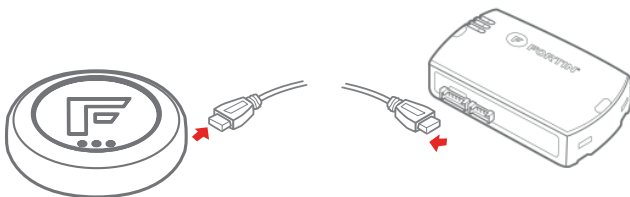
6

WITH T-HARNESS - AVEC T-HARNAIS

Red

Black

ISOLATE
NOT CONNECTED

ISOLEZ
NON BRANCHÉ

T-HARNESS*
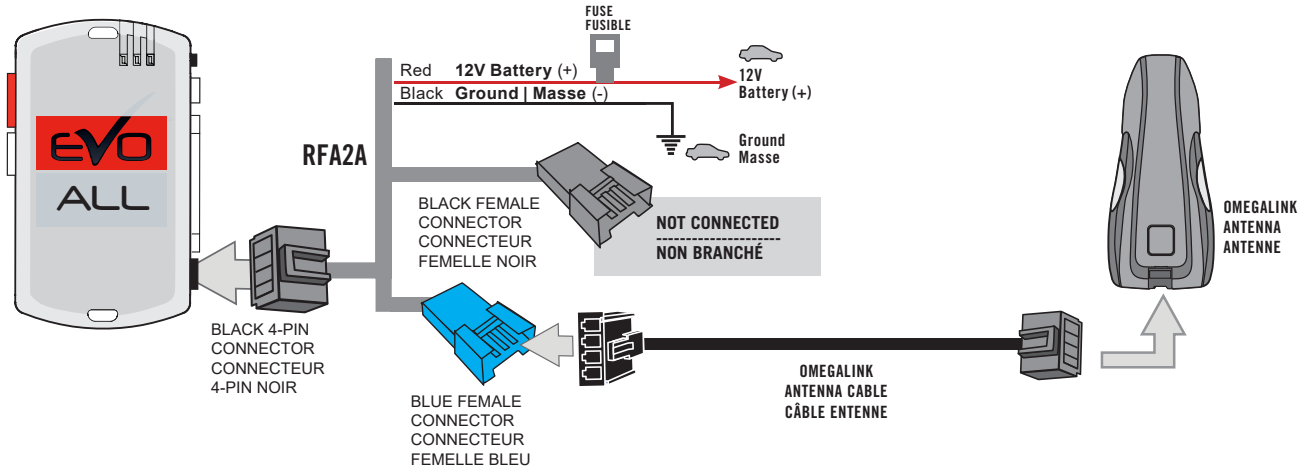**AVAILABLE** *Optional -
Sold separately depending
on the vehicle.

HARNAIS EN T*
DISPONIBLE: *Optionnel
- vendu séparement
selon le véhicule.

RFA2A

BLACK FEMALE
CONNECTOR
CONNECTEUR
FEMELLE NOIR

BLACK 4-PIN DATA-LINK
T-HARNESS* CONNECTOR
CONNECTEUR 4-PIN
DATA-LINK DU T-HARNAIS*

OMEGALINK
ANTENNA
ANTENNE

BLACK 4-PIN
CONNECTOR
CONNECTEUR
4-PIN NOIR

BLUE FEMALE
CONNECTOR
CONNECTEUR
FEMELLE BLEU

OMEGALINK
ANTENNA CABLE
CÂBLE ENTENNE

Connect both modules together as shown.

TO PROGRAM REMOTES ON THE UNITS

WITH EVO-ALL MODULE
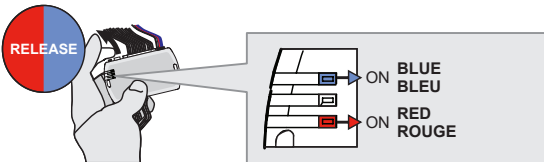
1

x1 HOLD
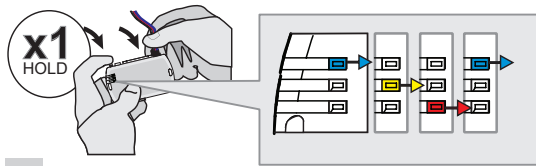
Press and hold the programming button: **Insert** the 4-Pin (Data-Link) connector.

↳The Blue, Red, Yellow and Blue & Red LED's will alternatively illuminate.

2

RELEASE

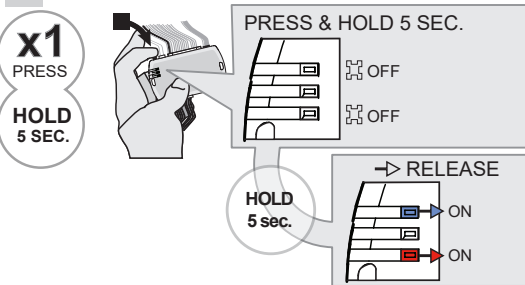ON **BLUE BLEU**

ON **RED ROUGE**

Release the programming button when the LED's are RED and BLUE.

If the LED are not solid BLUE and RED disconnect the 4-Pin connector (Data-Link) and go back to step 1.
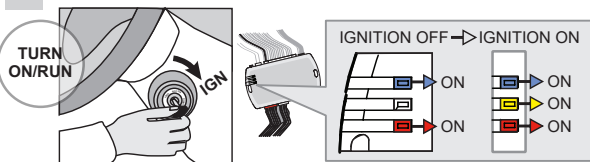
3

x1 PRESS

HOLD 5 SEC.

PRESS & HOLD 5 SEC.

OFF

OFF

HOLD 5 sec.

RELEASE

ON

ON

Press and **hold** the programming button 5 seconds.

↳ *The RED and BLUE LED's will turn OFF.*

Release the programming button.

↳ *The RED and BLUE LED's will turn ON.*

4

TURN ON/RUN

IGN

IGNITION OFF → IGNITION ON

ON   ON
ON   ON
ON   ON

Turn the Ignition to the ON/RUN position.

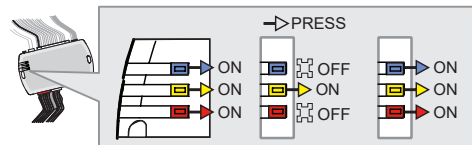↳ *The YELLOW LED will turn ON.*

5

All remotes must be program at the same time.
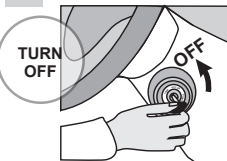
On each Transmitter **press and release** the **LOCK** button

OR OU

On each Transmitter **press and release** the **START** button.

PRESS

ON   OFF   ON
ON   ON   ON
ON   OFF   ON

↳ *The BLUE and RED LED's will flash once to confirm remote is coded.*

6

TURN OFF

OFF

Turn the Ignition to the OFF position.

WITH IGNITION SWITCH

1

IGN

Turn the Ignition ON.

2

OFF

Turn the Ignition OFF.

3

IGN

Turn the Ignition ON.

4

Press and release the brake pedal four times.

5

On each Transmitter **press and release** the LOCK button.

6

OFF

Turn the Ignition OFF.

The remotes is now programmed.

Use the remote of the remote starter or security system to test all of the supported features to ensure proper programming.

The remotes are now programmed.

Use the remote of the remote starter or security system to test all of the supported features to ensure proper programming.

WARNING

NOTICE The manufacturer will accept no responsibility for any electrical damage resulting from improper installation of the product, including either damage to the vehicle itself or to the remote-starter module. This module must be installed by a certified technician including all of the supplied safety devices. Please note that this guide has been written for trained professional technicians, a certain level of skills and knowledge is therefore assumed.

Neither the manufacturer or distributor of this module is responsible of damages of any kind indirectly or directly caused by this module, except for the replacement of this module in case of manufacturing defects. This module must be install by qualified technician. This instruction guide may change without notice.

To download the latest User Guide, visit carAlarm.com

Technical support: TEL: 770-942-9876 / 1-800-554-4053

REV.:20190517