
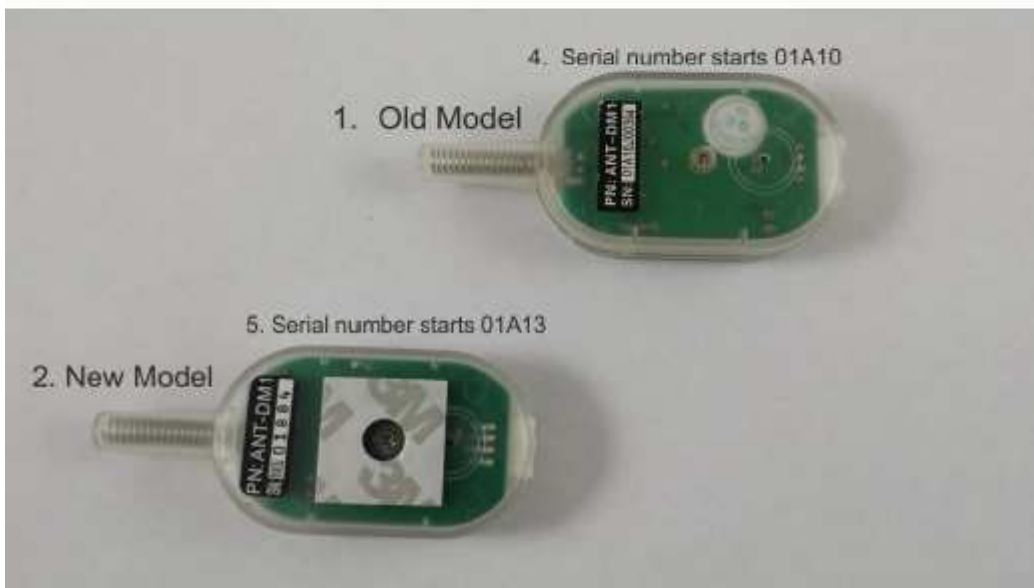



## AST (ATOM) and EVO-ALL

\*\*\* If you have the OLDER MODEL (1) of UltraStart ATOM, **DO NOT** set Supported RF Kit to ON.

\*\*\*If you have the NEW MODEL (2), go to next page.

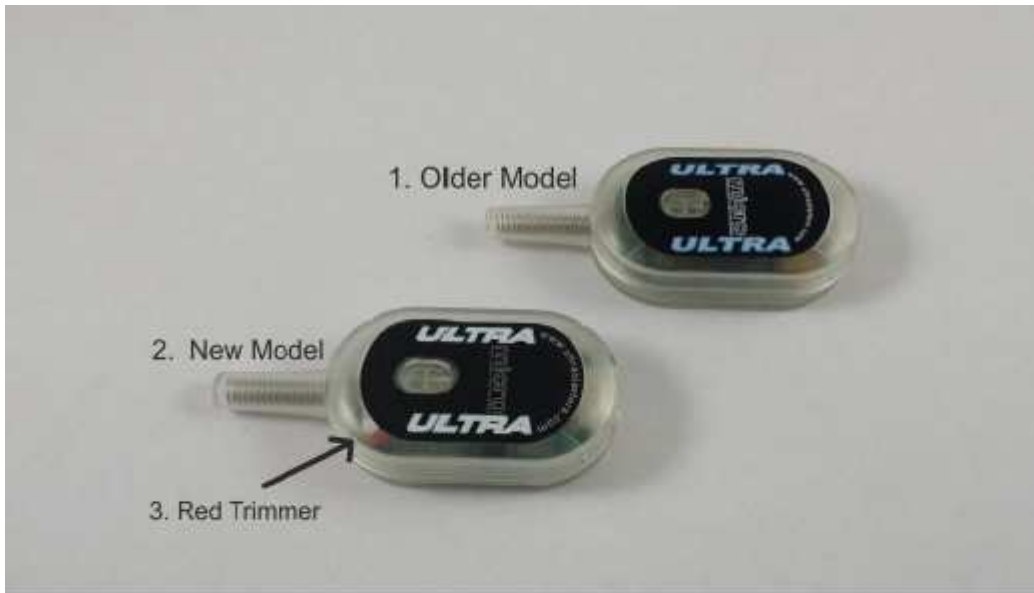


1. Plug in the Flash-Link-2 updater into the computer's USB port with the provided USB cable.

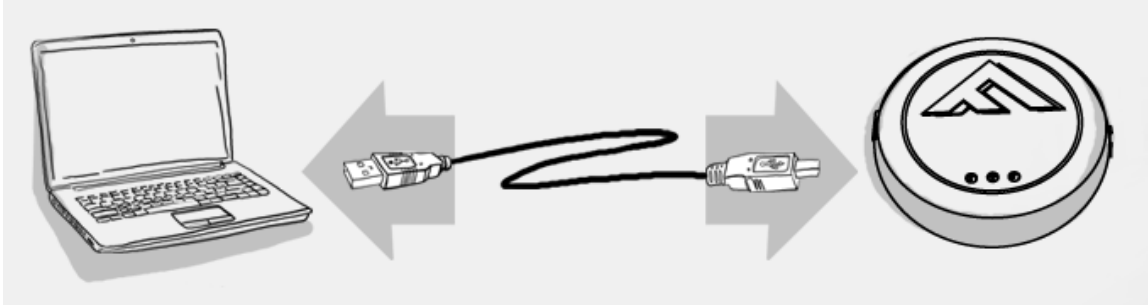


2. Run Flash Link Manager Software.




3. Plug in the Module you want to Flash update with the provided DATALINK cable.

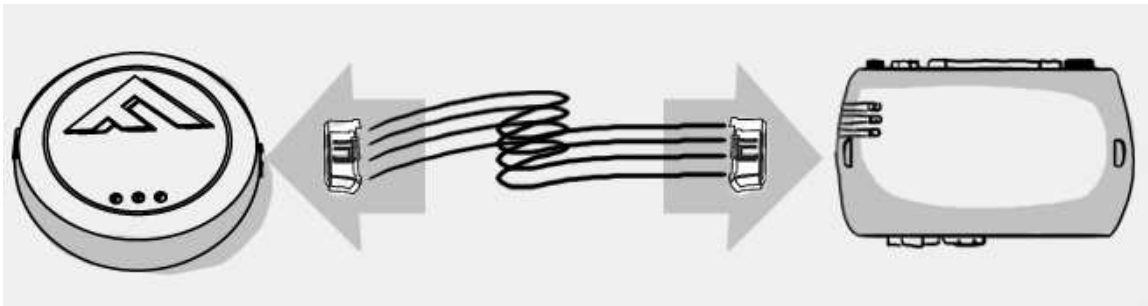


4. Click on UNIT OPTIONS tab.

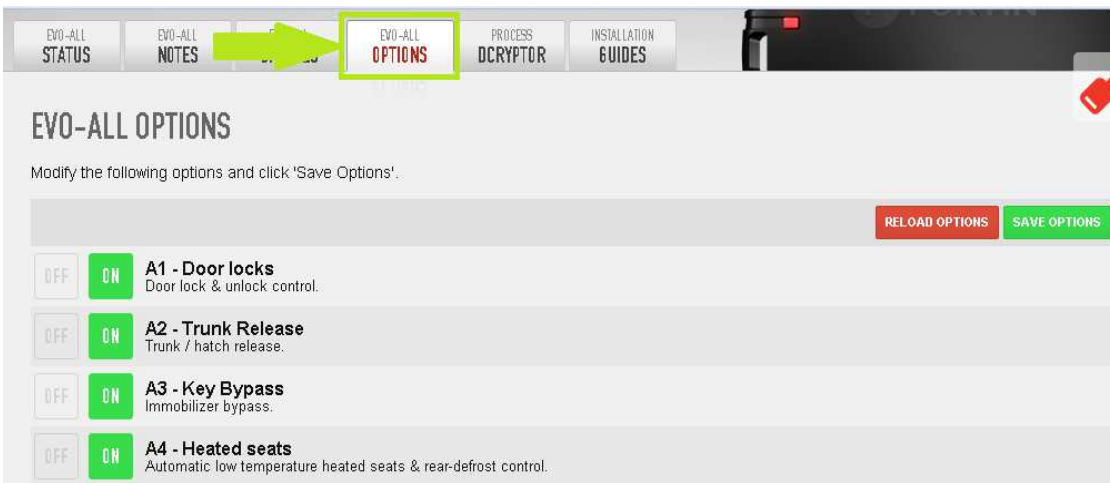

5. Activate Supported RF Kits and option H1 – Fortin.

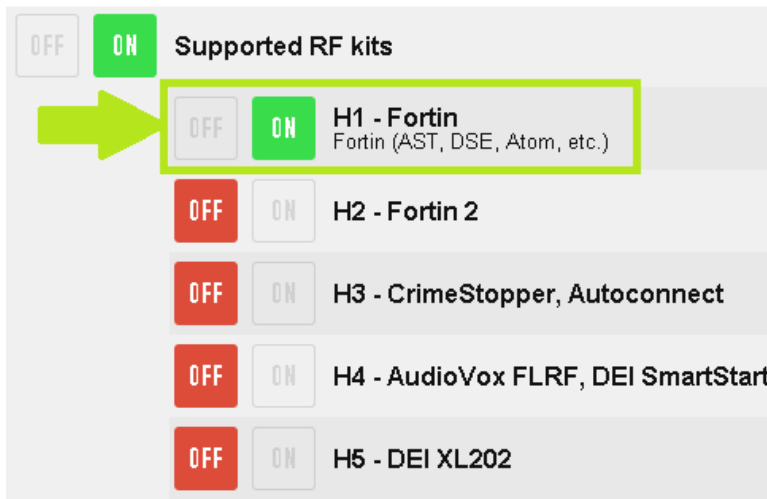

6. Click SAVE OPTIONS.

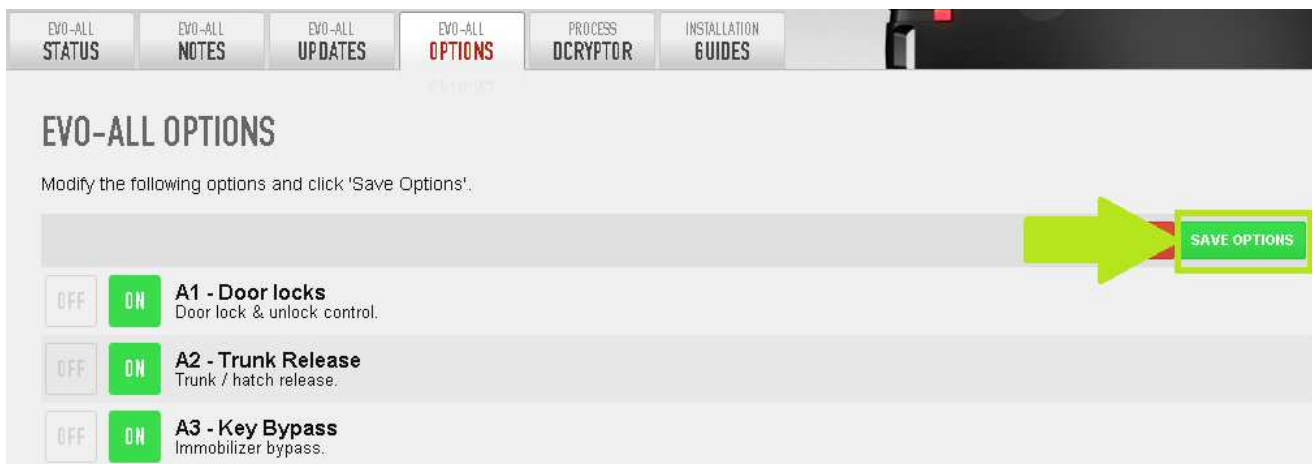

7. Wait for the Options Saved message to appear in the top right corner.



8. Connect the modules together with the ANTENNA cable supplied with the ATOM unit