


EVO-ALL with vehicle OEM Remotes (3XLock)


1. Plug in the Flash-Link-2 updater into the computer's USB port with the provided USB cable.

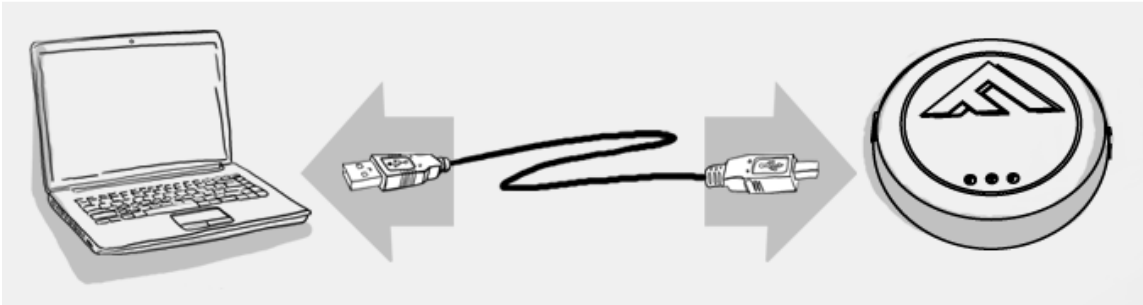


2. Run Flash Link Manager Software.




3. Plug in the EVO-ALL with provided DATALINK cable.

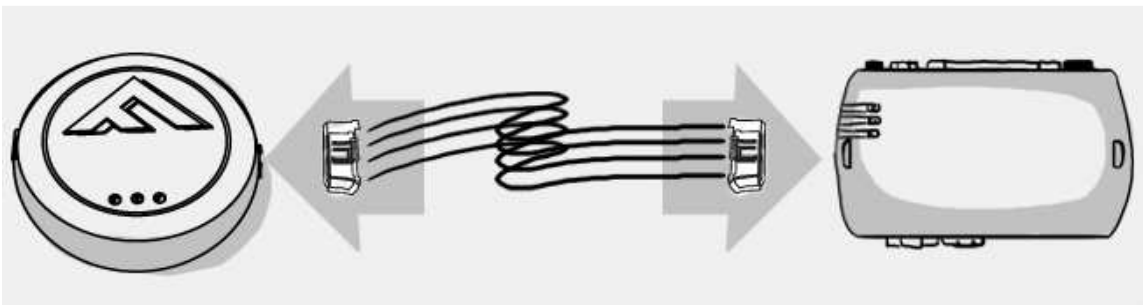

5. Click on EVO-ONE OPTIONS.

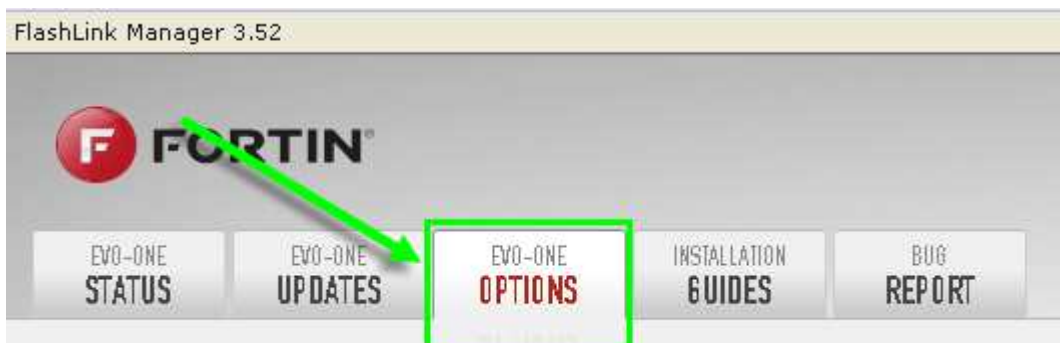

6. Turn Option C1 – OEM Remote Monitoring to ON.

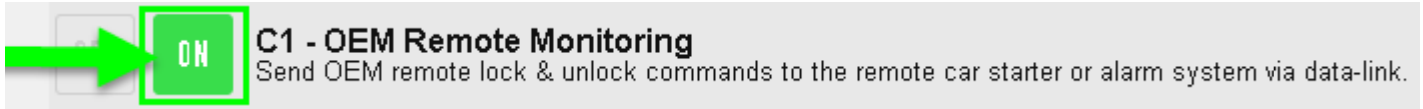


C1 - OEM Remote Monitoring
Send OEM remote lock & unlock commands to the remote car starter or alarm system via data-link.

7. Turn Option D1 – OEM Remote Stand Alone Remote Starter to ON



D1 - OEM Remote Stand Alone Remote Starter
Remote start the vehicle when the OEM remote's lock button is pressed 3x times.

8. Set the desired RUN TIME (3, 7 or 15 Minutes).

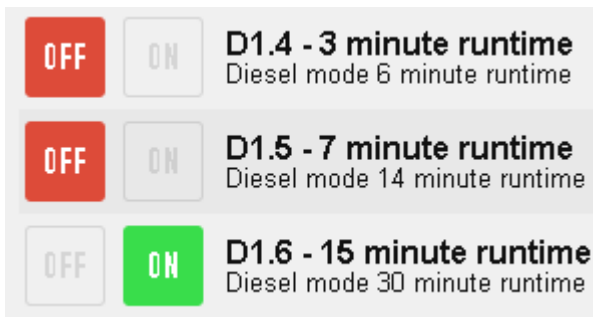

D1.4 - 3 minute runtime
Diesel mode 6 minute runtime

D1.5 - 7 minute runtime
Diesel mode 14 minute runtime

D1.6 - 15 minute runtime
Diesel mode 30 minute runtime

9. Save options.



RELOAD OPTIONS **SAVE OPTIONS**

10. Perform the install according to the vehicle specific install guide.

11. Program the module according to the vehicle specific install guide.

12. Test the install.