



PARTS

ANTENNA

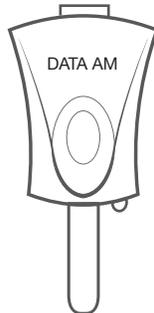


REMOTES

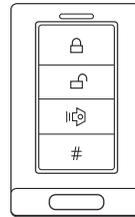

x2

REMOTES MAY BE
DIFFERENT THAN
PICTURED

DAC-ADPT

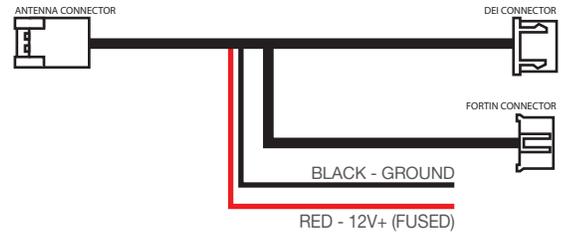


PROGRAMMING

MANUAL SELECTION FOR DATA PROTOCOL

- 1 Leave Ignition in OFF position
- 2 Press programming button (antenna button) 8x within 10 seconds (White LED will flash 2x)
- 3 Press the programming button 6x.
- 4 After 3 seconds White LED will flash the number of times according to your selection.

CONNECTIONS

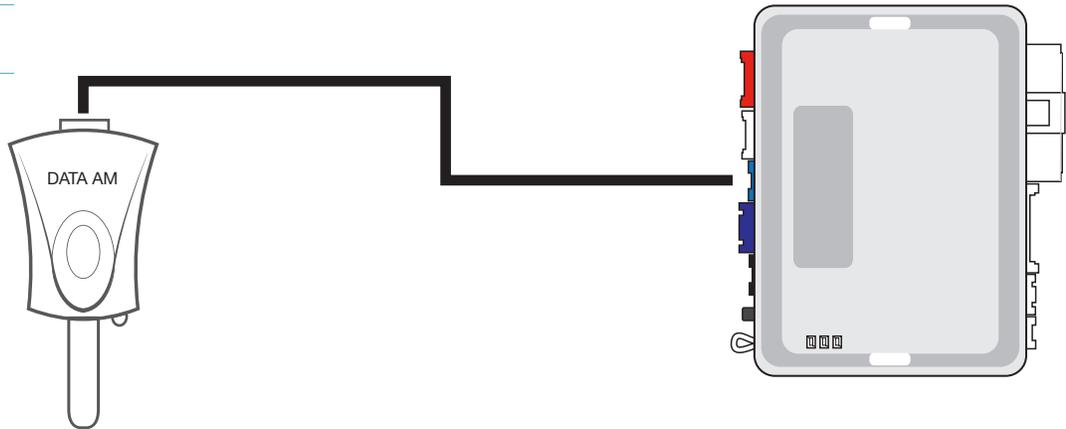

PROGRAMMING MODULE

DATA PROTOCOL : OPTION 6 - Fortin RF


- 1 Run FlashLink Manager, plug in EVO-ONE
- 2 Click Toggle to switch to Remote Starter Connection
- 3 Click Configuration, then select Options
- 4 Under RF Kits select Fortin 2 / Solace / Autoconnect
- 5 Click on "SAVE"

PROGRAMMING

PROGRAMMING REMOTES


- 1 Program remotes to EVO-ONE following instructions below

PROGRAMMING REMOTE TRANSMITTER(S)

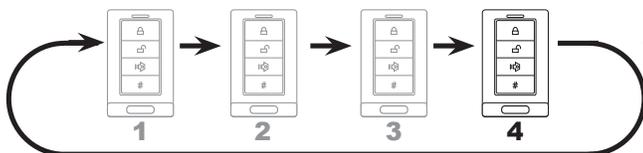


The system can learn up to a maximum of 4 remotes. When a 5th transmitter is learned the the 1st remote is erased (FIFO).

Download the specific vehicle installation guide, user guide or the latest quick installation guide at: WWW.FORTIN.CA

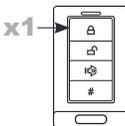STEP 1	STEP 2	STEP 3	STEP 4	STEP 5	STEP 6
 <p>Turn the Ignition ON.</p>	 <p>Press and hold the valet switch until the parking light turn ON, the horn/siren will chirp once.</p>	 <p>Press and release the valet switch five times. The parking lights will flash and the horn/siren wil chirp each time to confirm.</p>	 <p>Press and release the brake pedal once</p>	 <p>On each transmitter press the lock button. The LED will flash 1x for each remote programmed</p>	 <p>Turn the Ignition OFF to exit programming</p>

CONNECTIONS

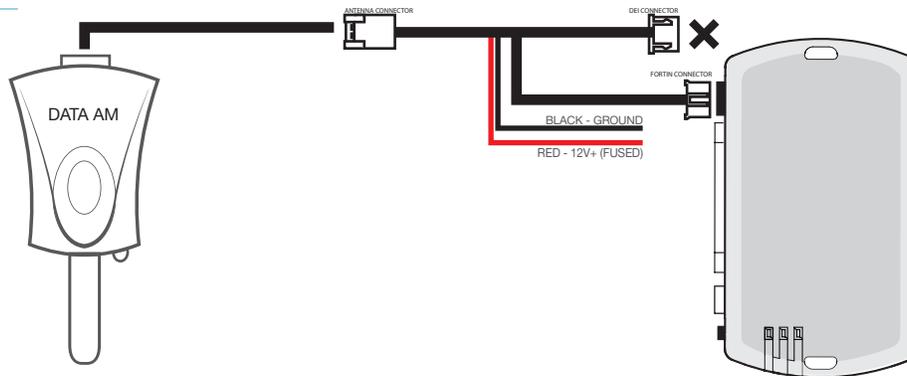

PROGRAMMING MODULE

DATA PROTOCOL : OPTION 6 - Fortin RF

- 1 Run FlashLink Manager, plug in EVO-ALL
- 2 Click on "EVO-ALL OPTIONS" Tab
- 3 Activate "SUPPORTED RF KITS" and Option "H2"
- 4 Click on "SAVE OPTIONS"
- 5 Wait for "Options Saved" message to appear.

PROGRAMMING

PROGRAMMING REMOTES

- 1 Program remotes to EVO-ALL following instructions below

STEP 1	STEP 2	STEP 3	STEP 4	STEP 5	STEP 6
<p>HOLD</p>	<p>HOLD</p>	<p>IGN</p>		<p>x1</p>	<p>OFF</p>
<p>Hold down programming button on EVO-ALL while inserting Datalink Cable. Release on BLUE & RED</p>	<p>Press and hold the programming button, release button when the Blue and Red LED's turn back on</p>	<p>Turn the Ignition ON.</p>	<p>The Yellow LED will turn on</p>	<p>On each transmitter press the lock button. The Blue and Red LED's on EVO-ALL will flash confirming programming.</p>	<p>Turn the Ignition OFF to exit programming</p>