


MODULE

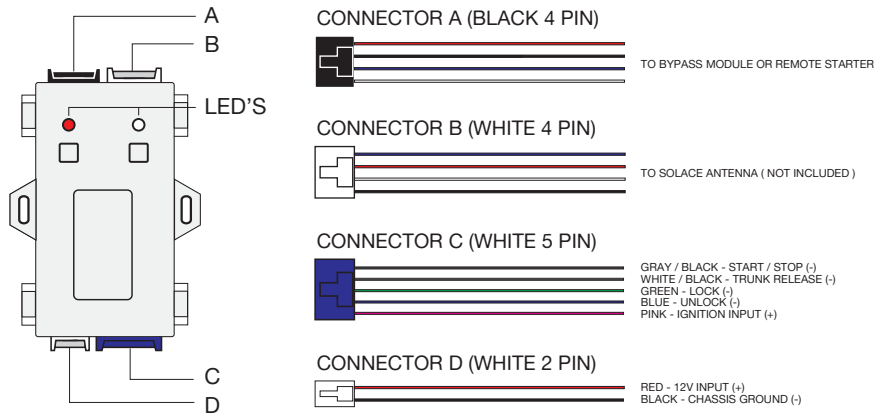

DIAGNOSTICS

RED LED (FLASHING / ON)

- 1x** Protocol Option 1
- 2x** Protocol Option 2
- 3x** Protocol Option 3
- 4x** Protocol Option 4
- ON** Ignition On

WHITE LED (FLASHING)

- 1x** Data communication from connected device.
- 2x - 10x** Option Programming

PROGRAMMING

DATA PROTOCOL SELECTION

- 1** Leave Ignition in OFF position. Close all DOORS, HOOD, TRUNK.
- 2** Press programming button (antenna button) 8x within 10 seconds (White LED on SIC3-RFK will flash 1x)
- 3** Choose your protocol below by pressing the programming button:
Option 2 - Press 4x - Fortin RF
- 4** After 5 seconds White LED will flash according to your selection.

REMOTE PROGRAMMING

REMOTE PROGRAMMING **ONLY REQUIRED FOR D2D, ESP2, and KEYLESS ENTRY

See programming instructions for specific module below.

OPTIONS

MENU 1*

	Option 1	Option 2	Option 3	Option 4
1-01 Ignition Locks	Enabled	Disabled	Unlock Only	
1-02 Lock / Unlock Options	Both 1x	Lock x1 / Unlock x2	Lock x2 / Unlock x1	Lock x2 / Unlock x2
1-03 Lock Pulse Timing	0.8 Secs.	100 mS	3 Seconds	8 Seconds
1-04 Unlock Pulse Timing	0.8 Secs.	100 mS	3 Seconds	8 Seconds
1-05 Trunk Pulse Timing	0.8 Secs	100 mS	3 Seconds	8 Seconds
1-06 Park Light Output	On	Off		
1-07 Start / Stop Pulses	1x On / Off	2x On / Off	3x On / Off	
1-08 Auxiliary Timing	0.8 Secs	Latched	2 Secs.	4 Secs.
1-09 Auxiliary Timing	0.8 Secs	Latched	2 Secs.	4 Secs.
1-10 Horn Pulse Timing	10mS	50mS		


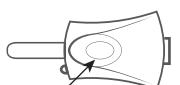
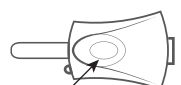
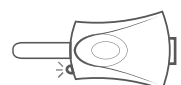
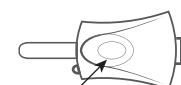

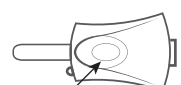
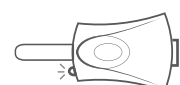


Menu 2*

	Option 1	Option 2	Option 3
2-01 Start/Stop Output	Start / Stop**	Park Lights	See Table
2-02 Lock Output	Lock	Park Lights	See Table
2-03 Unlock Output	Unlock	Park Lights	See Table
2-04 Trunk Output	Trunk Release	Park Lights	See Table


Option 2 Park Lights (-)
 Option 3 Horn (-)
 Option 4 GWA (-)
 Option 5 Aux 1 (-)
 Option 6 Aux 2 (-)
 Option 7 Disarm (-)
 Option 8 Rearm (-)

*Programming can be done with the SHHP-BT or Manually

**Start/Stop not supported on SIC3-K2

STEP 1  Turn the Ignition ON-OFF-ON	STEP 2  Press the Prog. Button 1x The LED will Flash 1x	STEP 3 25 Second Time Limit  Press the Prog. Button 1x - Menu 1 2x - Menu 2 8x - Reset	STEP 4 WAIT 3 Seconds  LED will flash to confirm 1x - Menu 1 2x - Menu 2 8x - Reset	STEP 5 25 Second Time Limit  Press the Prog. Button 1x - Sub Menu 1 2x - Sub Menu 2 3x---9x - Sub Menu 3-9
STEP 6 WAIT 3 Seconds  LED will flash 1x - Menu "X" - 1 2x - Menu "X" - 2 3x---9x - Menu "X" - 3-9	STEP 7 25 Second Time Limit  Press the Prog. Button 1x - Option 1 2x - Option 2 3x---8x - Options 3-9	STEP 8 WAIT 3 Seconds  LED will flash to confirm 1x - Option 1 2x - Option 2 3x---9x - Option 3-9	STEP 9  To continue programming repeat steps 5-8	STEP 10  Turn the Ignition OFF to exit programming.

CONNECTIONS

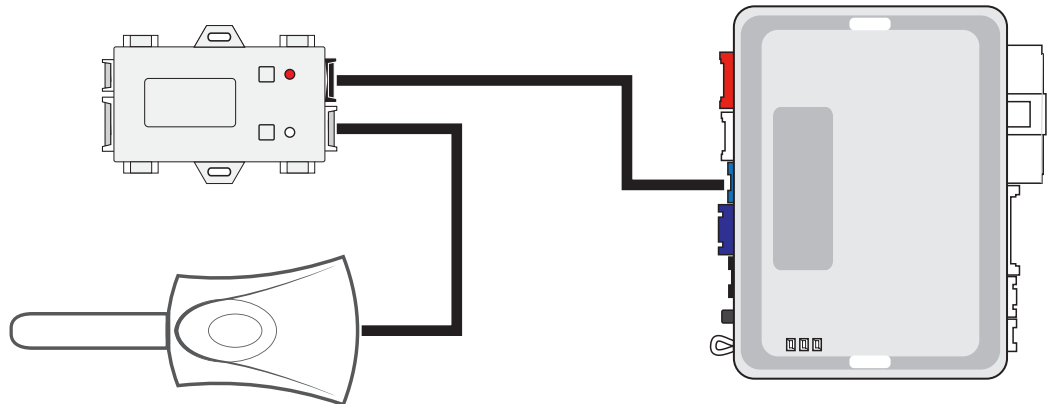







PROGRAMMING MODULE

DATA PROTOCOL : OPTION 2 - Fortin RF


- 1 Run FlashLink Manager, plug in EVO-ONE
- 2 Click Toggle to switch to Remote Starter Connection
- 3 Click Configuration, then select Options
- 4 Under RF Kits select Fortin 2
- 5 Click "SAVE"

PROGRAMMING

PROGRAMMING REMOTES

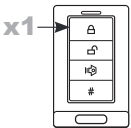STEP 1	STEP 2	STEP 3	STEP 4	STEP 5	STEP 6
 <p>Turn the Ignition ON.</p>	 <p>Press and hold the valet switch until the parking light turn ON, the horn/siren will chirp once.</p>	 <p>Press and release the valet switch five times. The parking lights will flash and the horn/siren will chirp each time to confirm.</p>	 <p>Press and release the brake pedal once</p>	 <p>On each transmitter press lock button. The LED will stop flashing confirming programming</p>	 <p>Turn the Ignition OFF to exit programming</p>

***NOTE -If programming does not work the RX / TX may need to be swapped on the datalink cable between the SIC3-RFK and EVO-ONE. Perform cable modification and repeat steps 1-6**




CONNECTIONS

*Not required when using a T-Harness (use datalink cable supplied with EVO)

RED - 12V+

BLACK - GROUND (-)

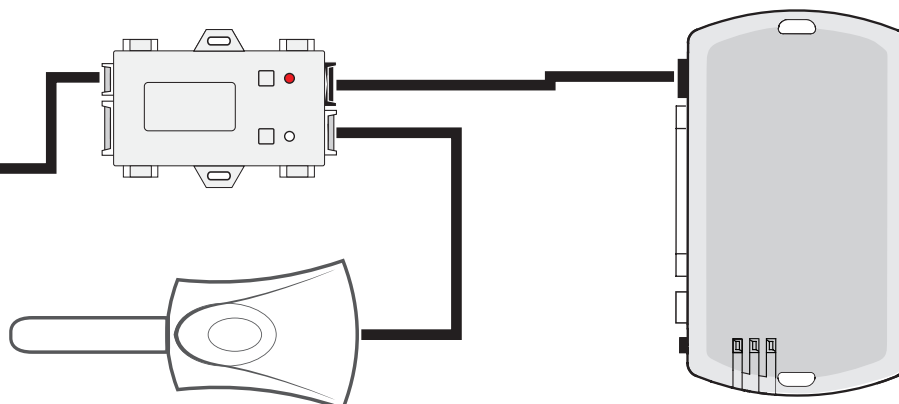

PROGRAMMING MODULE

DATA PROTOCOL : OPTION 2 - Fortin RF

- 1 Run FlashLink Manager, plug in EVO-ALL
- 2 Click on "EVO-ALL OPTIONS" Tab
- 3 Activate "SUPPORTED RF KITS" and Option "H2"
- 4 Click on "SAVE OPTIONS"
- 5 Wait for "Options Saved" Message to appear.

PROGRAMMING

PROGRAMMING REMOTES

STEP 1	STEP 2	STEP 3	STEP 4	STEP 5	STEP 6
<p>HOLD</p>	<p>HOLD</p>			<p>x1</p>	<p>OFF</p>
<p>Hold down programming button on EVO-ALL while inserting Datalink Cable. Release on BLUE & RED</p>	<p>Press and hold the programming button, release button when the Blue and Red LED's turn back on</p>	<p>Turn the Ignition ON.</p>	<p>The Yellow LED will turn on</p>	<p>On each transmitter press the lock button. The Blue and Red LED's on EVO-ALL will flash confirming programming.</p>	<p>Turn the Ignition OFF to exit programming</p>

***NOTE -If programming does not work the RX / TX may need to be swapped on the datalink cable between the SIC3-RFK and EVO-ALL. Perform cable modification and repeat steps 1-6**

Datalink Cable Modification

